

Products

Classic

Product Numbers Robe Hook 508/010/...

Towel Ring 6" 508/150/...

Towel Bar 23-5/8" 508/600/...

Tissue Holder 508/140/... 2 Post Tissue Holder 508/146/...

JADO USA 8404 Killam Blvd. Laredo, TX 78045 Phone: (800) 227-2734 Fax: (800) 552-JADO (5236) www.jadousa.com


Wall Mounted Accessories Installation Instructions

To ensure that your installation proceeds smoothly--please read these instructions carefully before you begin.

Luxury Faucets and Accessories



©JADO USA 2005

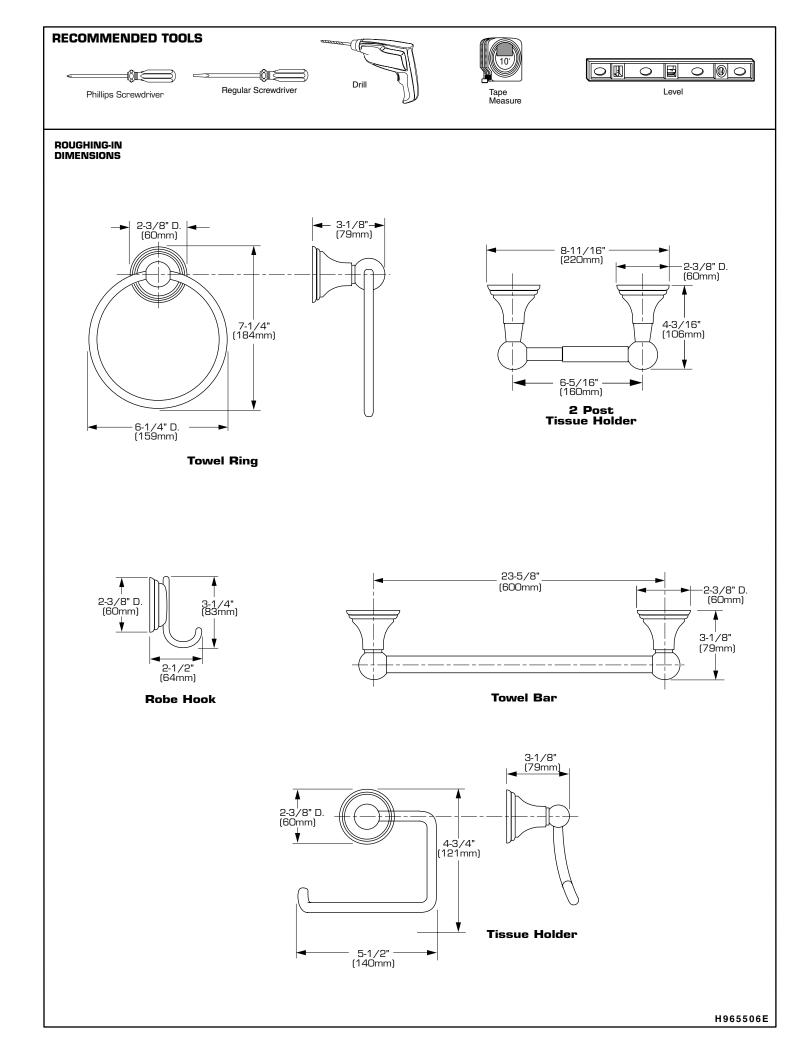



INSTALL WALL BRACKET

- The wall mounted accessories (1) work best if secured to a wall stud or cross brace within the wall, using the SCREWS (2) supplied.
- If the WALL MOUNTED ACCESSORIES (1) are to be installed on a tile or plaster wall the ANCHORS (4) and SCREWS (2) should be used.
- Determine desired height and location (optional) and mark a center line. Using the MOUNTING PLATE (3) as a template mark the two spots for the ANCHORS (4). If MOUNTING PLATE (3) is secured to a stud or cross brace drill small pilot holes for SCREWS (2).
- For installations on drywall or tiled walls: Use ANCHORS (4) and SCREWS (2) for securing MOUNTING PLATE (3) to finished wall. Drill two 1/4" dia. holes a minimum of 1-3/4" deep. Insert the two ANCHORS (4) flush with face of the finished wall.
- Secure MOUNTING PLATE (3) to wall with SCREWS (2).

INSTALL ACCESSORY

Install WALL MOUNTED ACCESSORY (1) onto installed MOUNTING PLATE (3). Push WALL MOUNTED ACCESSORY (1) flush against finished wall and tighten SET SCREW (5) with flat blade screw driver to secure to wall.

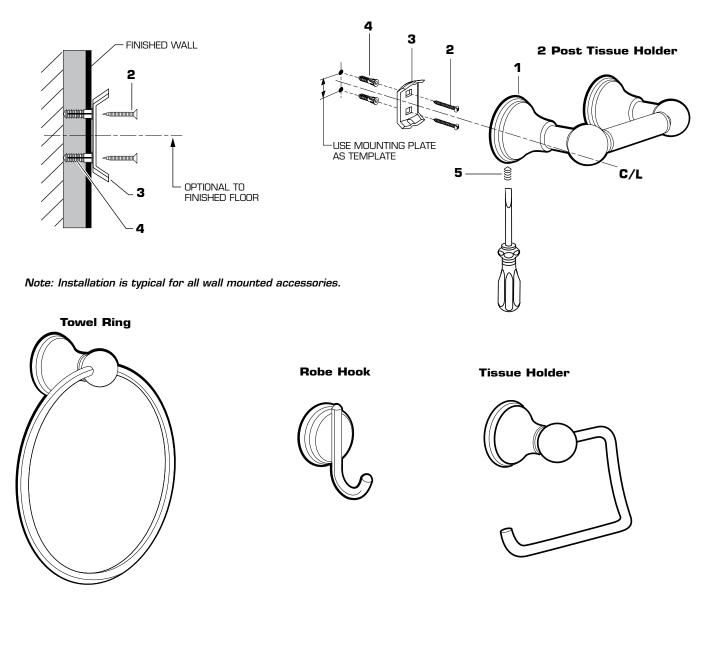

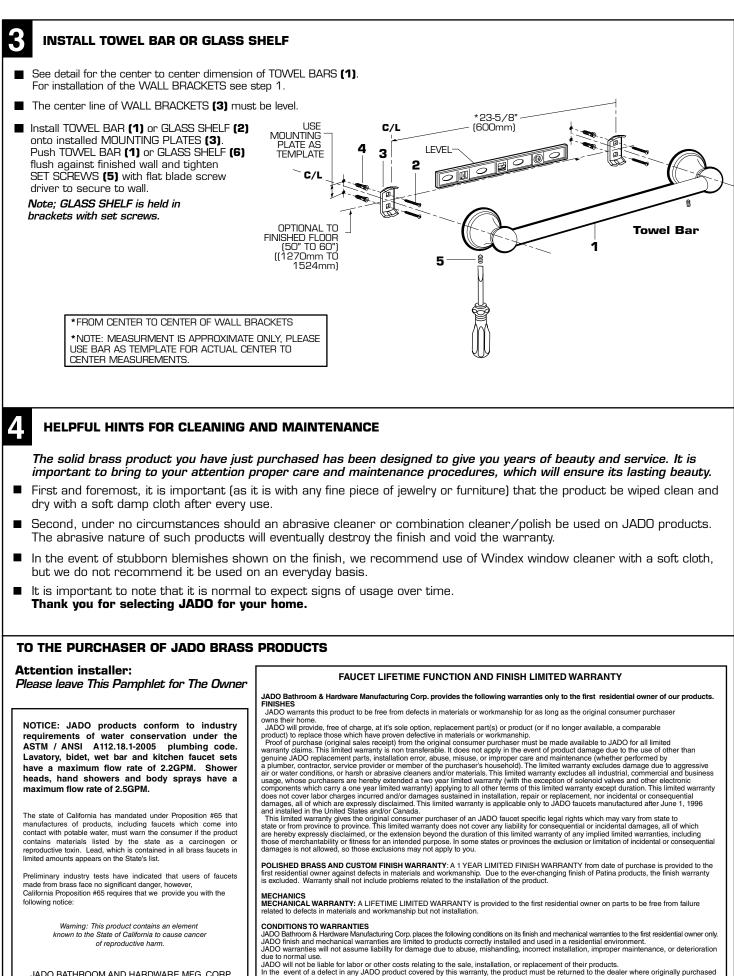

JADO BATHROOM AND HARDWARE MFG. CORP. 8404 Killam Blvd. Laredo TX, 78045

along with proof of purchase. JADO's obligation under the warranty shall be limited to the repair or exchange of any product which has been determined by JADO to be defective after appropriate examination